

PC CD-ROM

DANCE DANCE DANCE

PC DANCING GAME



DANCE
DANCE
DANCE

SAFETY NOTICE

Epilepsy warning :

DanceMat Software contains flashing images

When playing a software product which is connected to screen, stay at a sufficient distance from the screen and as far away as the connection cable can reach.

For your health, rest for about 15 minutes of each hour of play. Avoid playing when tired or suffering from lack of sleep. Always play in a brightly lighted room, and stay as far from the television as possible. Some people experience epileptic seizures when viewing flashing lights or patterns in our daily environment. These persons may experience seizures while watching TV pictures or playing video games. Even players who have never had any seizures may nonetheless have an undetected epileptic condition. Consult your doctor before playing video games if you have an epileptic condition or immediately should you experience any of the following symptoms during play, dizziness, altered vision, muscle twitching, other involuntary movements, loss of awareness of your surroundings, mental confusion, and / or convulsions..

Thank you for purchasing the Logic3 **PC Dance Mat and DANCE DANCE DANCE Game**. As with all Logic3 products the **PC Dance Mat and DANCE DANCE DANCE Game** have been built to the highest manufacturing standards and testing throughout their development to ensure you get the best possible products. Please read through and familiarise yourself with this manual before you use the **PC Dance Mat and DANCE DANCE DANCE Game**.

This Manual Contains:

How to Set Up Your PC Dance Mat

Dance Dance Dance Game Instructions

 
Minimum Requirements

PC with a Pentium 90 or higher processor with Windows® 95/ 98 / ME / 2000 / XP operating system.

Setting Up Your PC Dance Mat


Button Layout

The Logic3 **PC Dance Mat** is a controller that replicates a number of keys on the computer keyboard. The mat has 11 action buttons including the Enter and ESC keys.

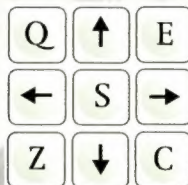

PC Dance Mat Features:

 - Non Slip Top Surface
- Rubberised Bottom Surface
- 9 Directional Dance Panels including the
- Centre Panel
- Esc & Enter Buttons
- 6 Foot Connector Cable that includes a PS2 keyboard connector .

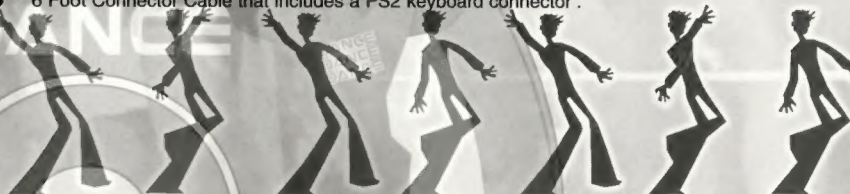

Notice: The Logic3 PC Dance Mat is an impact controller – please do not use it if you are suffering from any foot injury.

If you experience any pain in your feet, waist or back while using this product, please stop immediately and seek medical advice from your local GP.

Connection of the PC Dance Mat (PS/2):

- Disconnect the Purple coloured keyboard connector from your PC
- Connect the male connector from the PC Dancemat into the Keyboard input on your PC
- Now connect the male connector from your keyboard into the spare female connector on the PC Dancemat.
- The switch that is located on the junction box of the PC Dancemat toggles control between the Dance Mat or your Keyboard.
- To switch between the DanceMat and Keyboard please place the switch in relevant position.
- To use the keyboard place the switch in the position marked – Keyboard, to use the Dance Mat place the switch in the position marked – Player 1.
- Launch the game with the switch in the Keyboard position and then switch to the Player 1 setting to play the game using the DanceMat.



Caution:

- When using the **PC Dance Mat**, please keep away from furniture, walls, windows and any sharp or fragile objects.
- Please do not attempt to dismantle any main component of the **PC Dance Mat** in any way, as this could lead to the platform being damaged, and will invalidate your warranty.
- Disconnect the **PC Dance Mat** from your console when not in use.
- Do not use the **PC Dance Mat** if it is damaged in any way.
- Parental supervision is advised, when young children are using the **PC Dance Mat**

DANCE

If you have any problems with the set up and operation of DANCE, DANCE, DANCE please contact our Technical Support Department by E-mailing support@logic3.com, or by calling (020) 8902 2211 (National Call Rates Apply)



Installation of DANCE DANCE DANCE

Place the disc into your CD-ROM drive. If your computer is AutoPlay capable, the game's Installer menu will automatically appear on the screen. Select "Install DDD" from the list to start the installation process. Follow the on-screen instructions.

If your system is not AutoPlay capable, open the "My Computer" icon on your Desktop and select the drive letter that represents your CD-ROM drive. Double-click on the "Setup" icon and follow the instructions in the previous paragraph. A short-cut icon will appear on your desktop once the installation is complete.

 
HOW TO UNINSTALL THE GAME

If you want to totally uninstall the game from your system, use the standard uninstall procedure of Windows®

PLAYING THE GAME

To start the game, double-click on the DDD icon on your desktop. The table below shows you which keyboard keys or squares on your dance mat to press to access the appropriate arrow.

Key Diagram

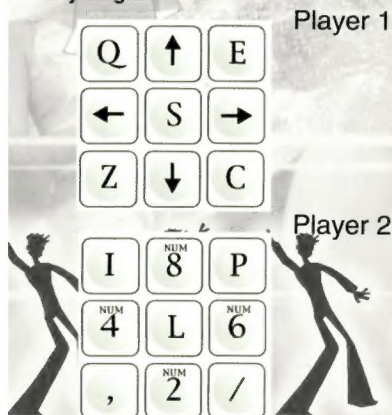

MENU

Main Menu

You have five menus to choose from on the screen. Details for each menu are as follows: Press the **UP** and **DOWN** keys to select the required item. You can also enable or disable the Player 2 option by pressing "**L**". Press **ENTER** to go to next step.

| | | |
|------------------|---|-----------------------------|
| Arcade | : | Plays 4 tracks |
| FreeStyle | : | Plays 1 track |
| Options | : | Change settings |
| Credits | : | Accesses the credits screen |
| Exit | : | Exits the game |

Options

The current chosen menu is indicated by the adjacent green symbol ">". To change this press **UP** and **DOWN**. You can also change each setting by pressing **LEFT** or **RIGHT**. Press **ESC** or **ENTER** to accept the chosen settings and return to the Main Menu.

| | | |
|----------------------|---|--|
| Background | : | Turn the background on or off |
| Game Speed | : | Changes the arrow speed to ?, 1, 2, 4 or 8 |
| Survival Mode | : | Turns the Survival Mode on or off, this allows you to continue play even if you miss a large number of dance steps |
| Mirror Mode | : | Reverses the arrows display |



Arcade

Displays 4 titles and the track information for each track on the screen. These are the tracks you are going to play. You can change the selected set of tracks by pressing **LEFT** or **RIGHT**. Press **ENTER** to go to Game Mode. If you wish to exit, simply press **ESC** to go back to Main Menu. By pressing **ESC**, you can go back to the previous step. The details of each track are on the Track Info screen. There is also a lucky dip option which allows 4 tracks chosen at random to be played.

| | | |
|---------------|---|--|
| TRACK | : | The number of each track |
| B.P.M | : | The speed of each track |
| LEVEL | : | The difficulty level of each track (average) |
| TODAY | : | Today's best score (in total) |
| RECORD | : | The overall best score (total) |


Free Style

This option performs one track only. You will see the chosen track high-lighted in colour. You can change the tracks by pressing **LEFT** or **RIGHT**. Press **ENTER** to go to Game Mode. The details of each track are on the Track Info screen.

| | | |
|---------------|---|------------------------------|
| TRACK | : | The track number |
| B.P.M | : | The track's speed |
| LEVEL | : | The track's difficulty level |
| TODAY | : | Today's best score |
| RECORD | : | The overall best score |

Game Mode

 Once you have chosen a track, select the Game Mode to suit you. Two different steps "4STEP" and "5STEP" will appear on the top of the screen followed by "EASY", "HARD" or "DOUBLE". Use the green ">" symbol to change your options. Press **LEFT** or **RIGHT** to change the mode and **LEFT** or **RIGHT** to select the chosen mode.

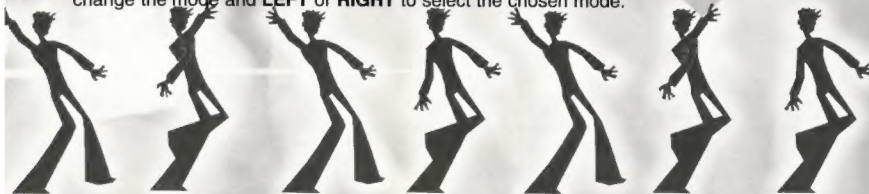

| | | |
|---------------|---|---------------------------------|
| 4STEP | : | 4STEP mode |
| 5STEP | : | 5STEP mode |
| EASY | : | Easy steps |
| HARD | : | Hard steps |
| DOUBLE | : | Using two mats at the same time |


PERFORMANCE

Once the music has started, it's time to move your feet!!! The arrows appear from the bottom of the screen towards the targets. The player must time his or her movement with each arrow as it hits the target. Depending on how accurate the player's dance step is, various comments e.g. **PERFECT**, **AWESOME**, **BOO** or **MISS** will appear on the screen. The gauge will also indicate how good or bad the player's performance is. If you wish to change the track, press **ESC** three times. This will take you to **RESULT**

RESULT

To go back to **MENU**, press **ESC** or **ENTER**.

| | | |
|--------------------|---|--|
| PERFECT | : | The number of PERFECT moves you made |
| AWESOME | : | The number of AWESOME moves you made |
| BOO | : | The number of BOO moves you made |
| MISS | : | The number of moves you missed |
| MAX COMBO | : | The highest number of combination steps you made |
| CAL. BURNED | : | Average Calories burned (for fun purposes only) |
| SCORE | : | Your score |
| GRADE | : | Your grading: A = Optimum F = Minimum. |

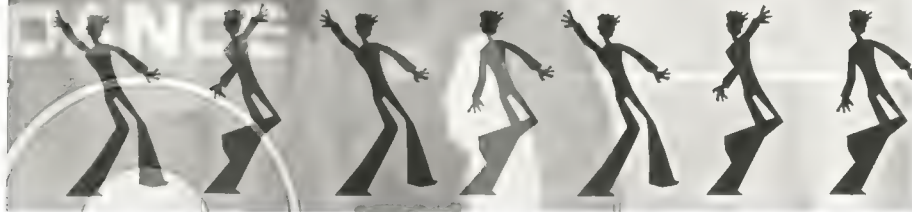 

IMPORTANT NOTICE

It is strongly recommended to take frequent breaks during long periods of TV game play. If you feel aching, numbness or tingling in your fingers, hands or wrists, or other physical discomforts; please consult a qualified medical professional.

If you have any problems with the set up and operation of **DANCE, DANCE, DANCE** please contact our Technical Support Department by E-mailing support@logic3.com, or by calling (020) 8902 2211 (National Call Rates Apply)

Health Warning

For your health, rest for about 15 minutes for each hour of play. Avoid playing when tired or suffering from lack of sleep. Always play in a brightly lighted room, and stay as far from the screen as possible. Some people experience epileptic seizures when viewing flashing lights or patterns in our daily environment. These persons may experience seizures while watching TV picture or playing video games. Even players who have never had any seizures may nonetheless have an undetected epileptic condition. Consult your doctor before playing video games if you have an epileptic condition or immediately should you experience any of the following symptoms during play: dizziness, altered vision, muscle twitching, other involuntary movements, loss of awareness of your surroundings, mental confusion, and/or convulsions.



Track Details

Independent Women'

Performed by No Destiny
(Knowles/Rooney/Barnes/Olivier) SONY/ATV
Music Publishing Holdings

Love Don't Cost A Thing'

Performed by TK
(Sharpe/Franklin/Lawson/Monroe/Harris) REACH
GLOBAL INC, WARNER/CHAPPELL N AMERICA,
EMI MUSIC PUBLISHING LTD

Teenage Dirtbag'

Performed by TK
(Brown) EMI MUSIC PUBLISHING LTD

What Took You So Long'

Performed by Sheldon
(Stannard/Harrington/Gallagher/Bunton/Themis/Morgan)
SONY/ATV MUSIC PUBLISHING, EMI MUSIC
PUBLISHING, CHRYSALIS MUSIC LTD, UNIVERSAL
MUSIC PUBLISHING

On and On

Performed by Same Story
SAIFAM GROUP srl

Can't Get You Outa My Head'

Performed by S.H.E.
(Dennis/Davis) EMI MUSIC PUBLISHING LTD ,
UNIVERSAL/MCA MUSIC LTD

Don't Stop Movin'

Performed by S Club (Solomon/Stevens/Spearritt/McIntosh
/Lee/Cattermole/Barrett/O'Meara/Ellis) UNIVERSAL MUSIC
PUBLISHING, RONDOR MUSIC LTD, BMG
MUSIC PUBLISHING LTD

'Maria'

Performed by DB
(Destri) - FAMOUS MUSIC PUBL (BMG)

I Feel Free

Performed by Same Story
SAIFAM GROUP srl

'I'm A Girl Not Yet A Woman'

Performed by Helen
(Armstrong/Sandberg/Yacoub) WARNER
CHAPPELL MUSIC LTD, ZOMBA MUSIC
PUBLISHERS LTD

'Asereje'

Performed by GIRLZZ
(Ruiz) © 2002 Francisco Manuel Ruiz Gomez ,
SONY/ATV Music Publishing Holdings LLC

'Gimme Hope Jo'anna'

Performed by HouseCream featuring Duffy
(Grant) - WARNER/CHAPPELL ARTEMIS

'Genie In A Bottle'

Performed by Kyria
(Sheyne/Frank/Kipner) WARNER CHAPPELL
MUSIC LTD, EMI MUSIC PUBLISHING LTD

'Mambo No 5'

Performed by L.B.
(Lubega/Zippy/Prado) GEMA, LATIN-AMERICAN
MUSIC PUBL

'When You're Looking Like That'

Performed by MC Boy
(Rami/Carlsson/Sandberg) - ZOMBA MUSIC
PUBLISHERS LTD

'Girls Just Want To Have Fun'

Performed by Texture
(Hazard/Vegas) SONY/ATV MUSIC
PUBLISHING

'Dancing In The Moonlight'

Performed by R.A.M.

(Kelly) - EMI UNITED PARTNERSHIP LTD

'Livin' La Vida Loca'

Performed by Red Hardin

(Child/Rosa) WARNER/CHAPPELL ARTEMIS,
UNIVERSAL MUSIC PUBLISHING



Logic3 International Ltd.
33 Northfield Industrial Estate
Beresford Avenue
Wembley
HA0 1NW, U.K.

Helpdesk telephone: +44 (0)20 8902 2211
<http://www.logic3.com>
Email: support@logic3.com



PC221EN1

